


STAINLESS MUG Model SM-WR Instruction Manual

Name of Each Part

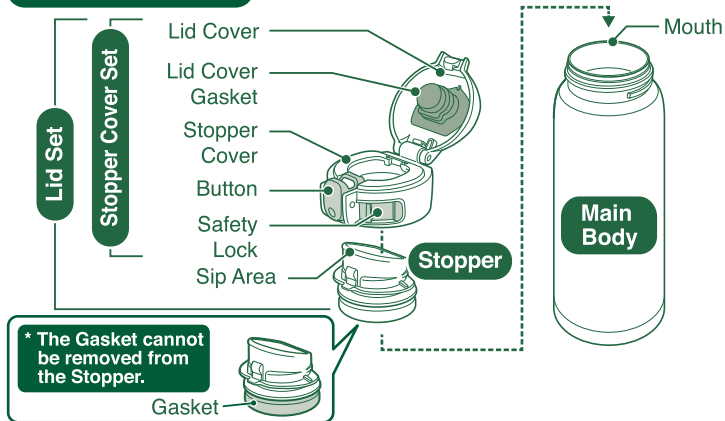

- The illustrations used in this instruction manual may differ from the actual product you have purchased.
- Please read these instructions before use, and keep for future reference.

Warning

- Please follow these instructions to prevent injury, scalding, accidents, malfunction or performance deterioration of the product, spilling of beverages, etc.

Do not allow infants or small children to use this product. Keep out of the reach of infants and small children.

Always make sure that the parts are attached during use.

Do not attach parts other than those specifically designed for this product.

Do not use the product if its thermal insulation performance has deteriorated.

Do not use if water enters the interior of the Vacuum Layer.

If the internal water seeps out from the Vacuum Layer, drinking it may cause illness.

Leave 1cm (1/2-inch) room on top when filling the Main Body.

Leave 1cm (1/2-inch) space below the rim (part A) Inside of the Main Body



Drink Level



When containing hot beverages:

- Drink slowly without tilting the product suddenly.
- The pressure inside the product may rise, making it difficult to remove the Lid Set. If that happens, open the Lid Cover once, and remove the Lid Set.

Do not disassemble the product (other than parts designed to be disassembled).

Do not heat in a microwave, as doing so may cause sparks.

Do not place near open flames (from gas stoves, etc.), on top of electric heaters, or IH cooking devices, as doing so may cause a fire or malfunction.

When pouring hot beverages into the Main Body, be careful not to let it tip over.

Do not open the Lid Cover with the product close to your face or tilted toward you.

Do not drink out of the product while driving.

When a vehicle drink holder is available:

- Make sure that the product sits securely inside the drink holder.
- Do not use a hanging-type drink holder that attaches to the window or air vent.

Consume beverages within the same day.

Spoiled beverages may produce gas, raising the pressure inside the product and causing the Lid Set to burst.

Never fill the product with the following:

- Dry ice or carbonated drinks
- Liquids high in sodium such as soup or Kobu-cha
- Dairy products or fruit juice
- Fruit pulp or tea leaves

Do not use this product for other than storing and keeping beverages hot or cold.

Do not hold the product by the Lid Set or the Lid Cover when carrying because the product may fall and cause injuries.

Make sure that there is no beverage leakage before using the product.

Avoid dropping or hitting against hard surfaces.

Never remove the sticker on the bottom of the Main Body.



Thoroughly clean the inside and outside of the Main Body (mouth) and the Stopper and Gaskets after every use. Be particularly careful after filling the product with sports drinks.

Do not fill the product with the Lid Set attached, as it may overflow.

Do not place near heat sources such as gas stoves, ovens, and heaters, as doing so may cause deformation or discoloration of the product.

Break ice cubes into smaller pieces, as failure to do so may cause deformation of the Main Body and leakage.

Place the product vertically when carrying it in a bag to prevent leakage or condensation.

This product is designed to be drunk directly, so the beverage may splash if it is used for pouring.

Do not scratch or rub the design on the outside of the Main Body strongly using fingernails or hard objects, as this may cause the design to come off.

Note: The rattling noise that may be heard when the Main Body is shaken comes from the metallic foil used in the vacuum insulation to increase heat (cold) retention, and does not indicate a malfunction.


How to Use:

- Follow the instructions for care and wash the product thoroughly before use.
- When you first use the product, there may be a plastic smell. However, this will become less noticeable with use.

Locking and Unlocking the Safety Lock

- Close the Lid Cover and lock.

- Do not close the Lid Cover when the Safety Lock is locked.



Opening and Closing the Lid Cover

- How to open




- How to close



How to Disassemble the Lid Set:


1 Remove the Stopper.

With the Lid Cover open, hold the Lid Set and press on the back of the Sip Area (parts indicated by the arrows ↓) to remove the Stopper.

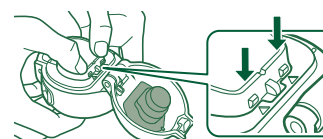

2 Remove the Lid Cover Gasket.


Pinch the edge of the Lid Cover Gasket and pull it toward you to remove.

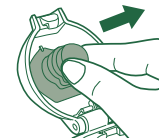

How to Assemble the Lid Set:


1 Attach the Lid Cover Gasket.

Align the Small Opening on the Lid Cover Gasket with the protrusion on the Lid Cover.

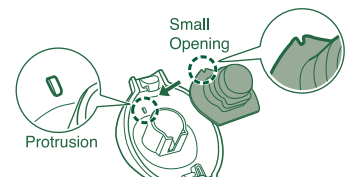

2 Attach the Stopper.

Align the ▽ marks on the Lid Cover Set and the tabs on the Stopper, and press the Stopper in to attach it.

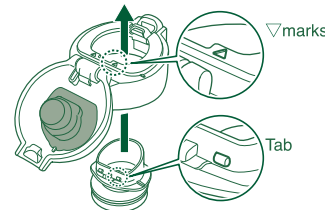

How to Take Care of Your product:

- Clean the product after each use to prevent odors and mold, and to keep the product sanitary.
- Always disassemble the product before cleaning.

When Cleaning Your Product:

- Do not boil or use a dishwasher or dish-dryer.
- Do not clean using paint thinner, polishing powders, abrasive cleansers, scrub brushes (nylon, metal wire, etc.), melamine sponges, the nylon side of an abrasive sponge, or any similar items.
- Do not use bleach as it may damage the product.
- Zojirushi's designated cleaning detergent SB-ZA01E may be used to clean the interior of the Main Body, the Stopper, and the Lid Cover Gasket.
- The Main Body is fully washable, but do not soak it in water for an extended period of time.
- If the product is not going to be used for an extended period, wash thoroughly and dry well. Store the product away from high temperatures and humidity.

Regular Care

- Using warm water and mild dishwashing liquid, wash the Lid Set and the outside of the Main Body with a sponge and the inside of the Main Body with a soft sponge with a handle. Use a small brush if necessary.
- Rinse, wipe away remaining water, and leave to dry thoroughly.

- Streaks or smudges caused by rubbing on the coated portion of the Main Body can be removed using a soft eraser.


Dealing with Stubborn Dirt

Rust Spots and Water Stains	- Fill the Main Body with hot water with 10% vinegar without attaching the Lid Set. - After 30 minutes to an hour, wash the interior thoroughly.
Tea and Coffee Stains	Remove the Lid Set and use Zojirushi's cleaning detergent SB-ZA01E. (Contact Zojirushi Customer Service or your local dealer for further information.)

Replacing the Stopper and Lid Cover Gasket:

We take care in only using materials that are safe and hygienic for food contact. However, if plastic parts become damaged or their surface becomes rough, please replace them for optimum performance. The Stopper and other consumable parts may need to be replaced due to time and wear. Please check them about once a year. When replacing parts, please record the model number and part name beforehand. Then contact either the store where you purchased the product or Zojirushi Customer Service. Replacement parts may be available for an additional charge.

스테인리스 보온병 SM-WR형 사용설명서

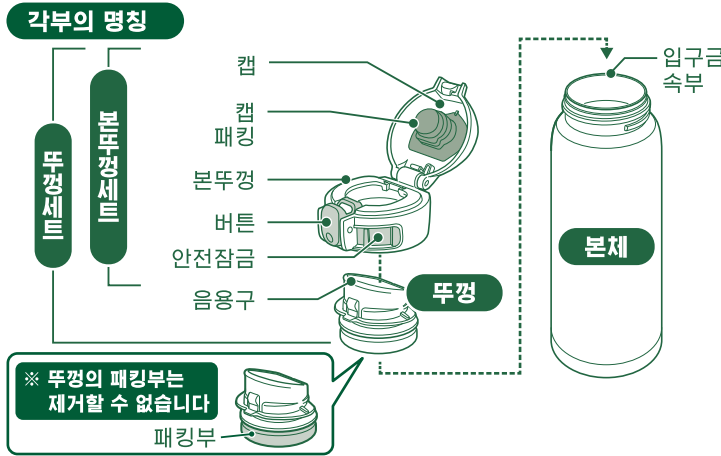

● 구입하신 상품과 이 사용설명서에 기재되어 있는 일러스트에는 차이가 있을 수 있습니다.
● 사용하기 전에 반드시 읽어 보시고, 잘 보관해 두시기 바랍니다.

주의 ● 부상·화상·사고, 제품의 고장이나 성능 저하, 음료의 누설 등을 방지하기 위해 반드시 지켜 주십시오.

영유아는 사용하지 못하도록 한다. 또한 영유아의 손이 닿는 곳에는 두지 않는다	진공층 내부에서 물의 소리가 나는 경우는 사용하지 않는다
각 부품을 반드시 부착한 상태로 사용한다	진공층 내부의 물이 새어나온 경우 마시면 몸의 상태가 나빠지는 원인이 됩니다.
본 제품 전용 부품 외는 부착하지 않는다	
보온·보냉 성능이 저하된 제품은 사용하지 않는다	
뜨거운 음료를 넣었을 경우 ● 음료를 마실 경우에는 제품을 갑자기 기울이지 말고 천천히 마신다 ● 제품 내의 압력이 올라가 뚜껑세트를 열 때 잘 열리지 않을 수 있다. 이러한 경우에는 캡을 한 번 연 후 뚜껑세트를 연다	

화재나 고장의 원인이 되므로, 불이 직접 닿거나(가스레인지 등) 전기히터, IH 쿠킹 히터 등의 위에 제품을 올려지 않는다	음료가 새지 않음을 확인한 후 사용한다
뜨거운 음료를 본체에 넣을 때는 넘여지지 않도록 주의한다	떨어뜨리거나 던지는 등 강한 충격을 주지 않는다
제품을 기울이거나 얼굴에 가까이 댄 상태에서 캡을 열지 않는다	본체 외부 밑부분에 붙어있는 용기 바닥면 스티커는 절대 떼어내지 않는다
자동차 주행 중, 운전자는 제품을 사용하지 않는다	사용 후 바로 본체 내부, 본체 외부(입구금속부), 뚜껑, 패킹류를 깨끗이 씻는다. 특히 스포츠 음료를 넣어 사용한 경우에는 주의한다
자동차 전용 드링크 홀더를 사용할 수 있는 경우 ● 제품이 드링크 홀더에 안정적으로 고정되는지 확인한다 ● 시판용 드링크 홀더는 바닥 거치형을 사용한다	음료가 넘치는 원인이 되므로 뚜껑 세트를 끼운 상태에서 음료를 넣지 않는다
음료는 그날 중으로 다 마신다 음료가 부패되어 가스가 발생하여 제품 내의 압력이 올라가 뚜껑세트가 튀어나가는 등 사고의 원인이 됩니다.	변형이나 변색의 원인이 되므로 제품을 난로나 풍로 등 화기 옆에 두지 않는다
다음과 같은 것들은 절대로 넣지 않는다 ● 드라이 아이스, 탄산음료 등 ● 된장국, 스프, 다시마 차 등 염분이 포함된 것 ● 우유, 유제품 음료, 과즙 등 ● 과일, 녹차잎 등	본체가 변형되어 누설의 원인이 되므로 얼음은 미리 작게 부셔서 넣는다
음료의 보온 및 보냉 이외의 목적으로 사용하지 않는다	가방 등에 넣을 때는 혹시라도 음료가 새어 나오거나 제품의 결로를 방지하기 위해 제품을 똑바로 세워 둔다
떨어뜨리면 위험하므로 뚜껑세트나 캡만을 잡은 상태로 운반하지 않는다	본 제품은 직접 마시는 것을 목적으로 한 제품입니다. 컵 등에 따르면 뛰는 우려가 있습니다.
	본체의 그림 무늬가 벗겨지는 원인이 되므로 손톱이나 딱딱한 것으로 긁거나 문지르지 않는다

※ 본체를 흔들면 소리가 납니다만 이상이 아닙니다. 보온, 보냉 효과를 위해 본체 내부에 삽입한 금속박 때문에 나는 소리입니다.

사용법

- 사용하기 전에 제품을 손질법에 따라 충분히 씻어 내십시오.
- 사용 초기에는 플라스틱 등의 냄새가 날 수 있지만 계속 사용하면 점차 없어집니다.

안전잠금의 해제와 잠금

● 캡을 닫고 잠근다

● 안전잠금이 잠금 상태로 뚜껑을 닫지 않는다

캡의 개폐

● 여는 방법

● 닫는 방법

뚜껑세트 분리방법

1 뚜껑을 분리한다

캡을 연 상태에서 뚜껑세트를 잡고 음용구의 뒤쪽(↓부분)을 누릅니다.

2 캡패킹을 분리한다

캡패킹의 돌출부분을 잡고 당겨 뺍니다.

뚜껑세트 장착방법

1 캡패킹을 장착한다

캡패킹의 컷아웃 부분을 캡의 돌기부에 맞춥니다.

2 뚜껑을 장착한다

본뚜껑 세트의 ▽표와 뚜껑의 ▽부를 맞추어 끝까지 확실히 장착합니다

손질법

- 냄새나 오물 부착, 곰팡이 발생을 방지하여 오랫동안 청결하게 사용할 수 있도록 주의사항을 지켜 사용하신 후에는 반드시 손질해 주십시오.
- 반드시 분리하여 손질해 주십시오.

손질 시 주의사항

- 삶거나 식기세척건조기, 식기건조기 등은 사용하지 마십시오.
- 시너, 연마분, 연마제가 함유된 세제, 수세미류(나일론, 금속제 등), 멜라민 스폰지, 스폰지 나일론 표면 등을 사용하지 마십시오.
- 제품을 손상시키는 원인이 되므로 표백제는 사용하지 마십시오. 당사가 지정하는 「스테인리스 보온병용 세정제 SB-ZA01E」는 본체 내부, 뚜껑, 캡패킹에 사용할 수 있습니다.
- 본체는 물 속에 오랫동안 담가두지 마십시오.
- 장기간 사용하지 않을 경우는 충분히 씻어서 건조한 후 고온·다습한 곳을 피해 보관해 주십시오.

평상시의 손질법

- ① 미온수로 희석한 주방용 세제를, 뚜껑세트, 본체 외부는 스폰지, 본체 내부는 손잡이가 있는 부드러운 스폰지 브러시에 묻혀 씻는다
손질하기 어려운 부분은 시중에서 판매하는 소형 브러시 등으로 씻어 주십시오.
- ② 행군 후 물기가 남지 않도록 물기를 닦고 건조시킨다
- 본체의 도장 부분이 스쳐서 생긴 줄모양의 흔적 등이 상기 손질법으로 잘 지워지지 않을 때는 부드러운 지우개를 이용해 손질하면 지워질 수 있습니다.

심하게 오염된 경우의 대처방법

붉은 녹 반점이나 물때	① 뚜껑세트를 끼우지 않은 상태에서 식조를 약 10% 넣은 온수를 본체 내부에 담는다 ② 30분~1시간 후에 본체 내부를 잘 씻는다
차 앙금, 커피 등 오염	뚜껑세트를 본체에서 분리시켜 「스테인리스 보온병용 세정제 SB-ZA01E」(별매품)을 사용한다

- 뚜껑·캡패킹은 소모품입니다. 1년을 기준으로 확인해 주십시오.
- 뚜껑 등의 수지는, 식품 위생 측면을 고려하여 안전한 재질로 제작되었지만, 거칠어지거나 손상된 경우에는 부품 교체를 권장합니다.(유상)



使用说明书

— 4 —